
SW IVI24



Outlook / Structure of Sw04 Socom Sniper Always set the selector switch to the sate position when you are not tiring or during storage

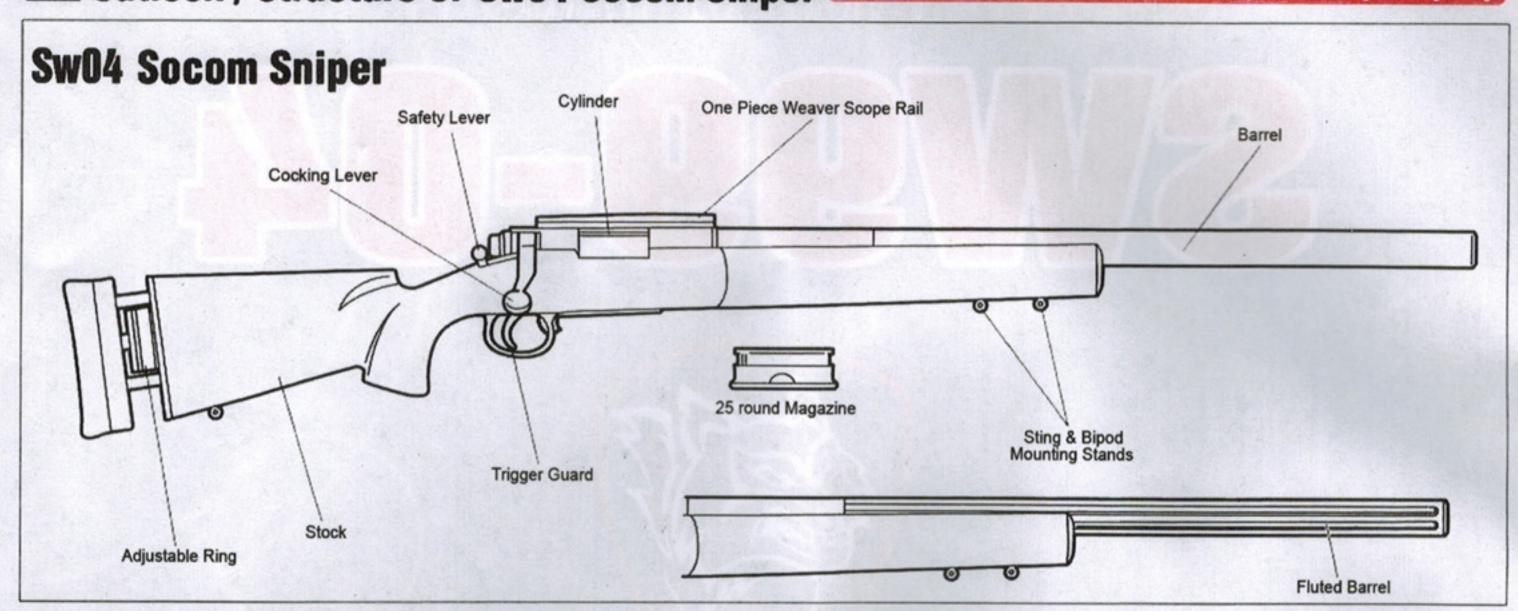


Specification of Socom Sniper		
Name	Sw04 Socom Sniper 'Military Type' With One Piece Fluted Barrel	Sw04 Socom Sniper 'Civilian Type' With One Piece Barrel
Weight	3.603kg	3.69kg
Barrel Length	515mm	515mm
Barrel Caliber	6.08mm	6.08mm
Pellet Capacity	25	25
Pellet	6mm BB	6mm BB
Initial Pellet Speed	85-105 m/Sec	85-105 m/Sec
Operation	Bolt Action	Bolt Action
Model No	S001M	S002M

2 Operation


1 How to use the Safety Lock

Pull the safety lever backward in order to make the safety function valid.

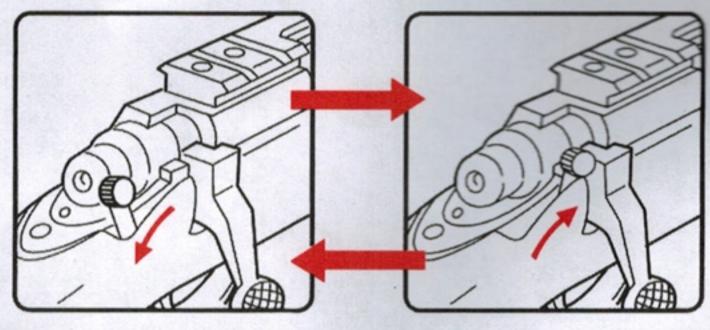


Push the safety lever forward in order to remove the safety function.

Procedure of Magazine Attachment / Detachment

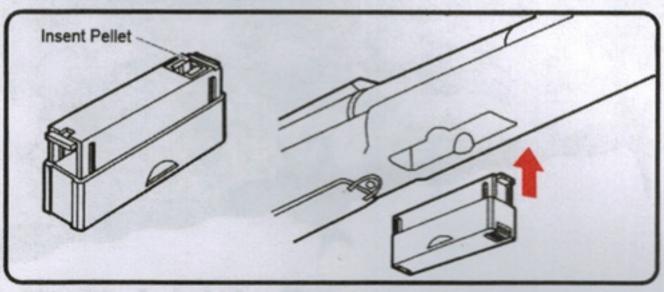

The pellet hatch in the magazine needs to be parallel to the muzzle's direction.

Holding the bottom of the magazine and push upward, until it's locked.

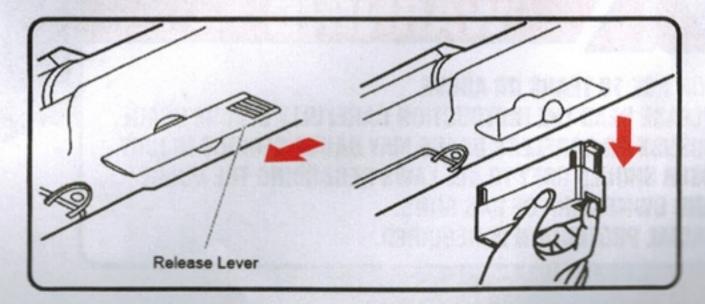

Please pinch tightly on the release lever, then pull it out from the barrel.




High precision is required for the operation of the magazine. Avoid invasion by dust and dirt into the magazine to prevent malfunctions.

How to Fire





Always set the safety lever to the safety position when you are not firing or during storage.

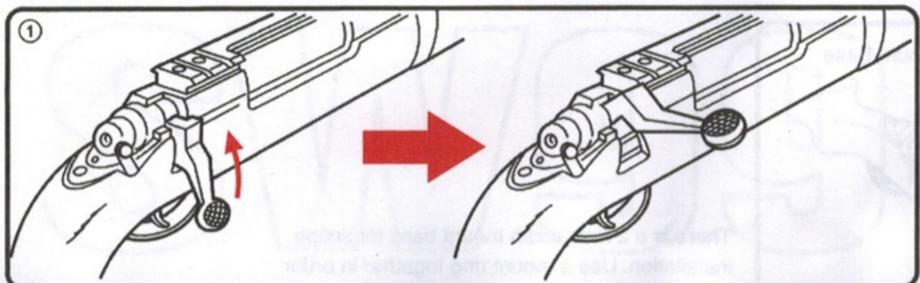

Push the cocking lever upward.


By then, pull the cocking lever backward in parallel situation until you heard a sound.

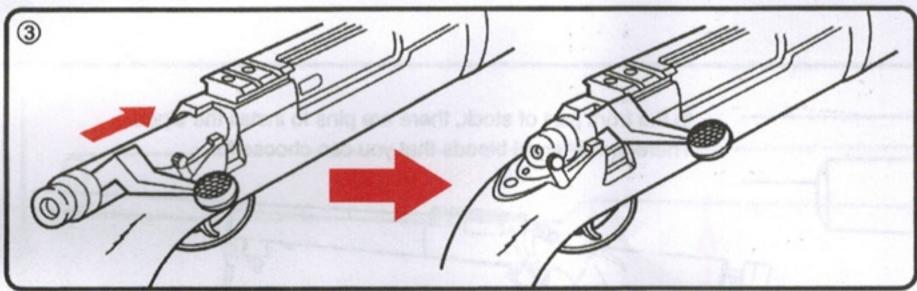

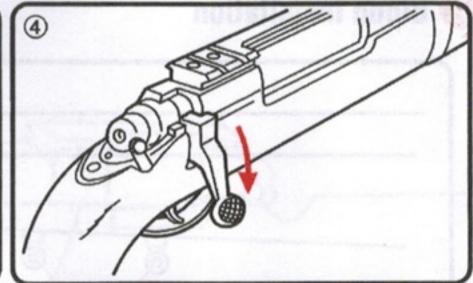


Keep the angle of the lever unchanged and push it forward.

Put the lever back to the original position.

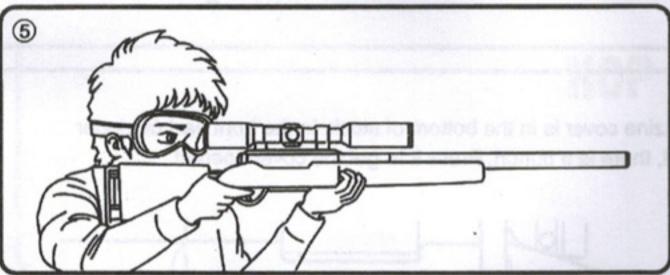


Put your finger hanging on the trigger, after confiming the direction of the target.

Make sure the target & shooting range is safety enough and it will not affect the others.

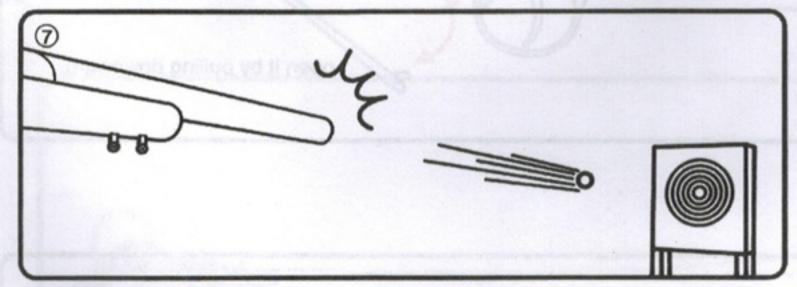


Point to your target and BB pellets will shoot towards.

Unlock the safety function, push the safety lever forward.

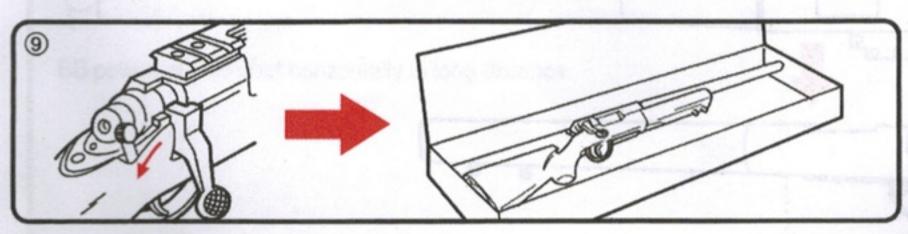


Pull down the safety lever and then please keep this condition in gun case.


4 Stock Adjustment

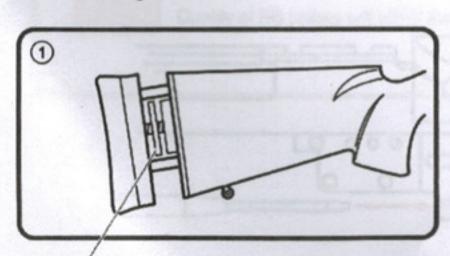

Loose the lock ring

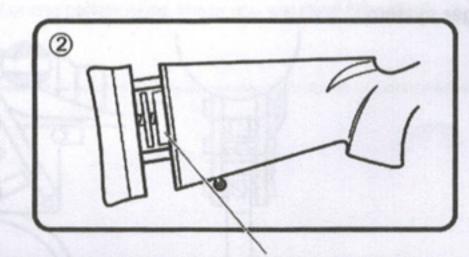

Adjust the length by turning the adjustable ring. (Adjustable range: about 60mm)

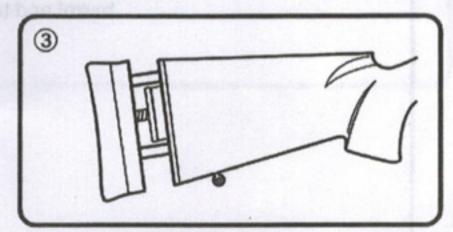


Fixed the length by locking the lock ring to the adjustable ring tightly.



After shooting around 1000 BB pellets, please spray some silicone oil to the parts of the rifle.


SW99-04


6 Scope Installation

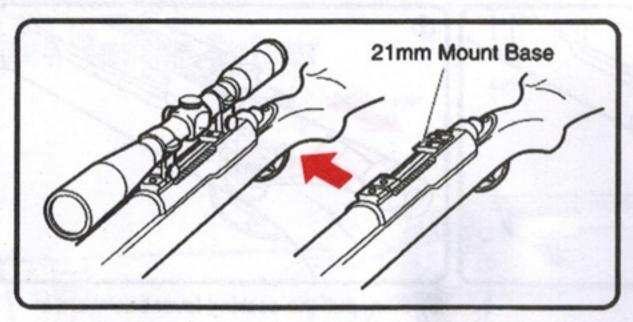


There is a 21mm width mount base for scope installation. Use a mount ring together in order to hold the scope on the gun.

6 Bipod Installation

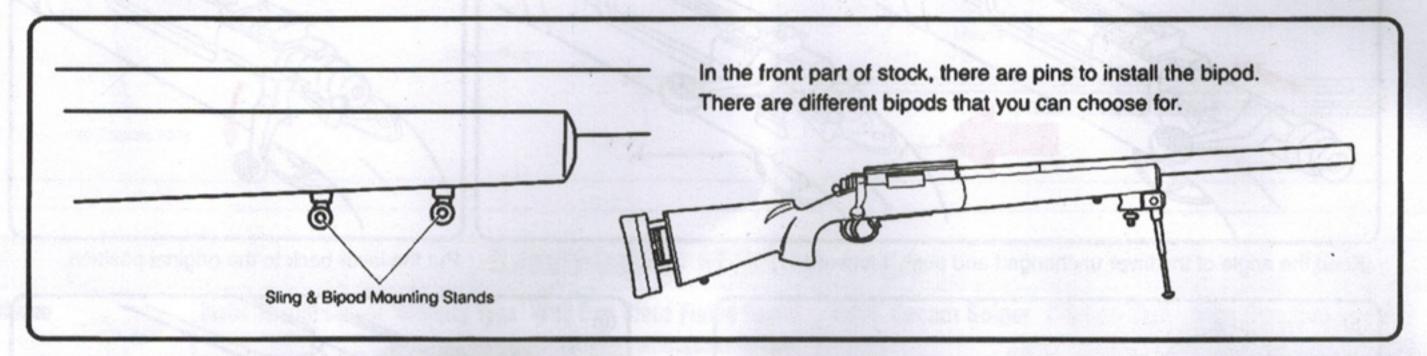


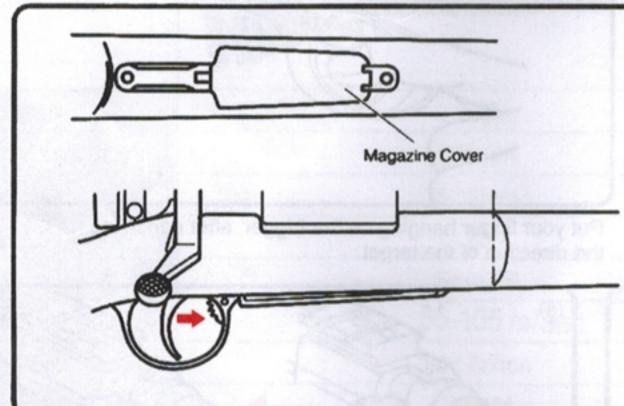

Magazine cover is in the bottom of stock. In the front part of trigger guard, there is a button. Press it to get the cover opened.

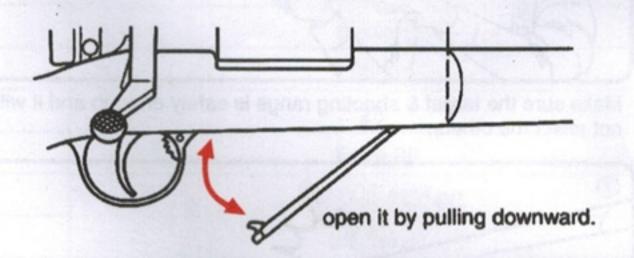



Adjustment of trigger system

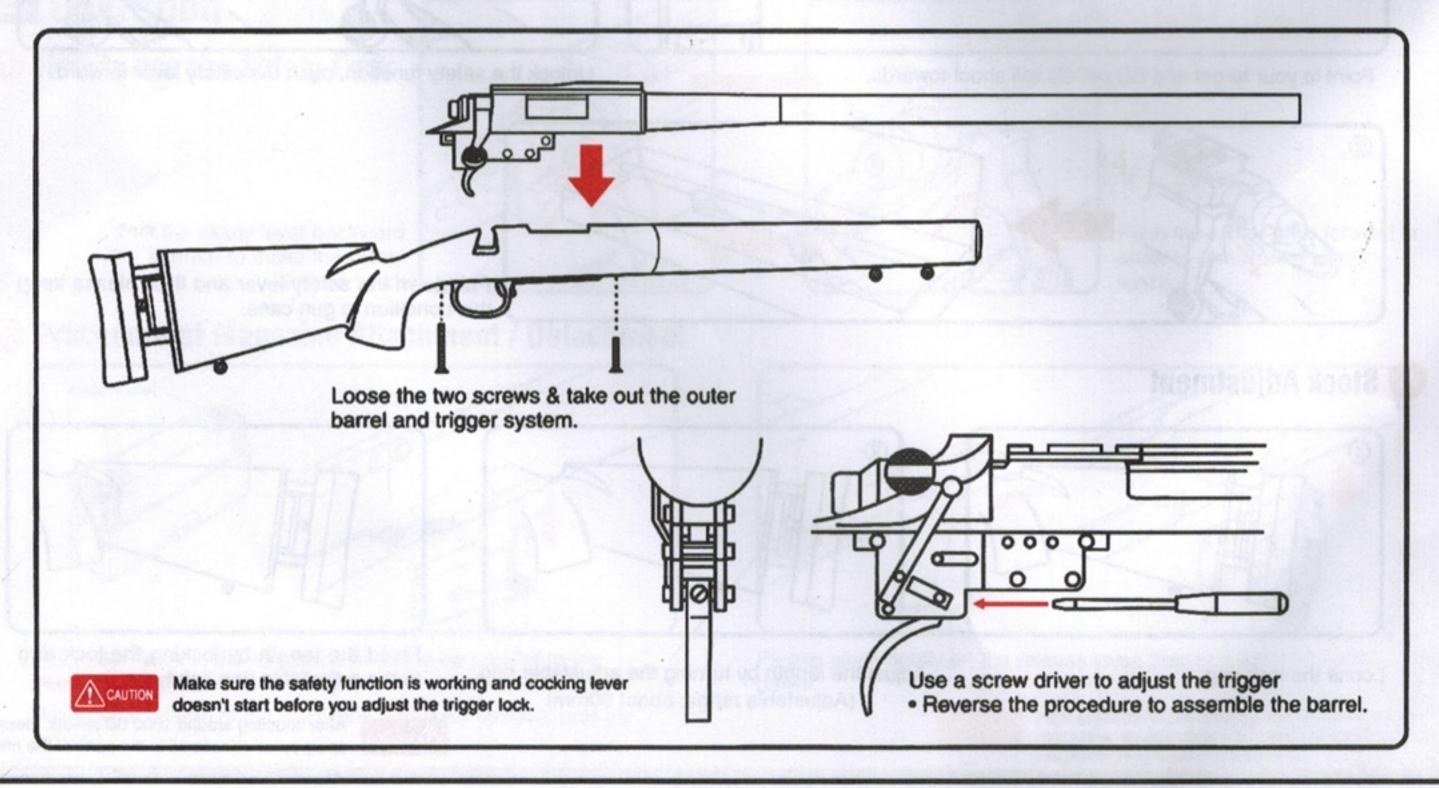

SW99-04


SW99-04

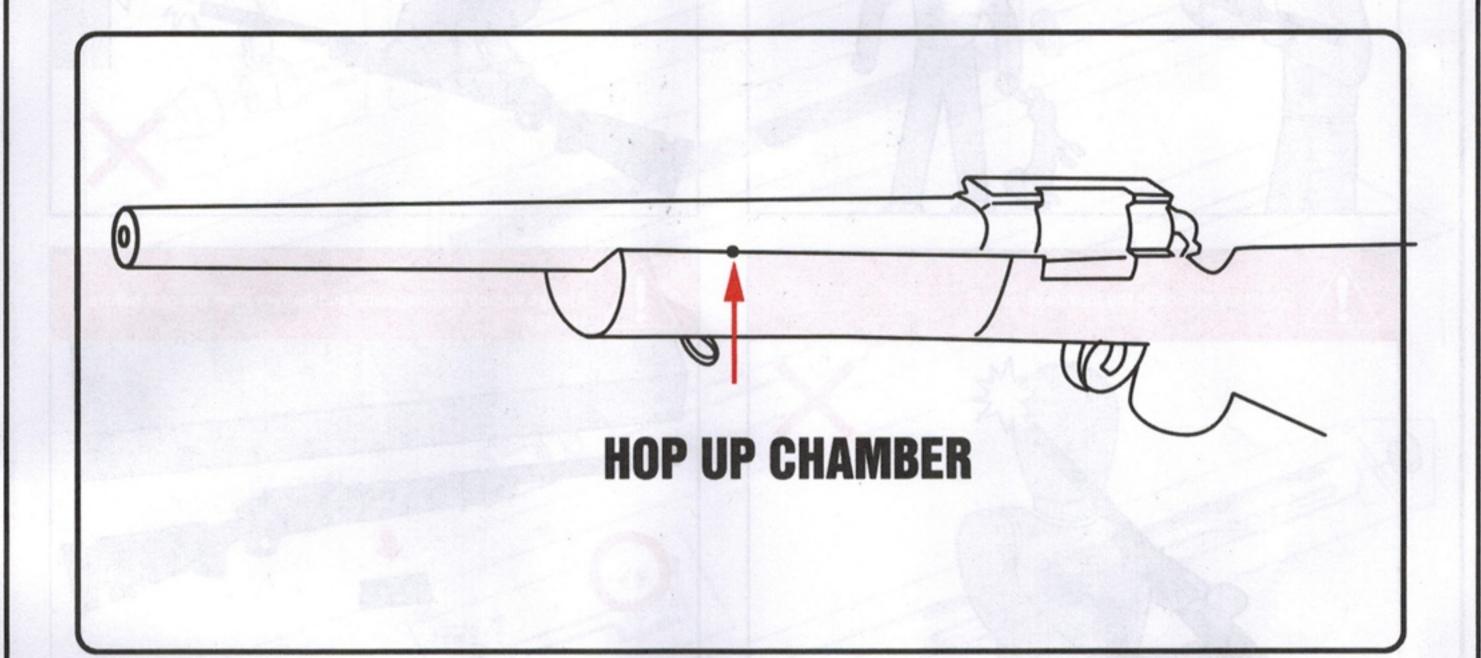

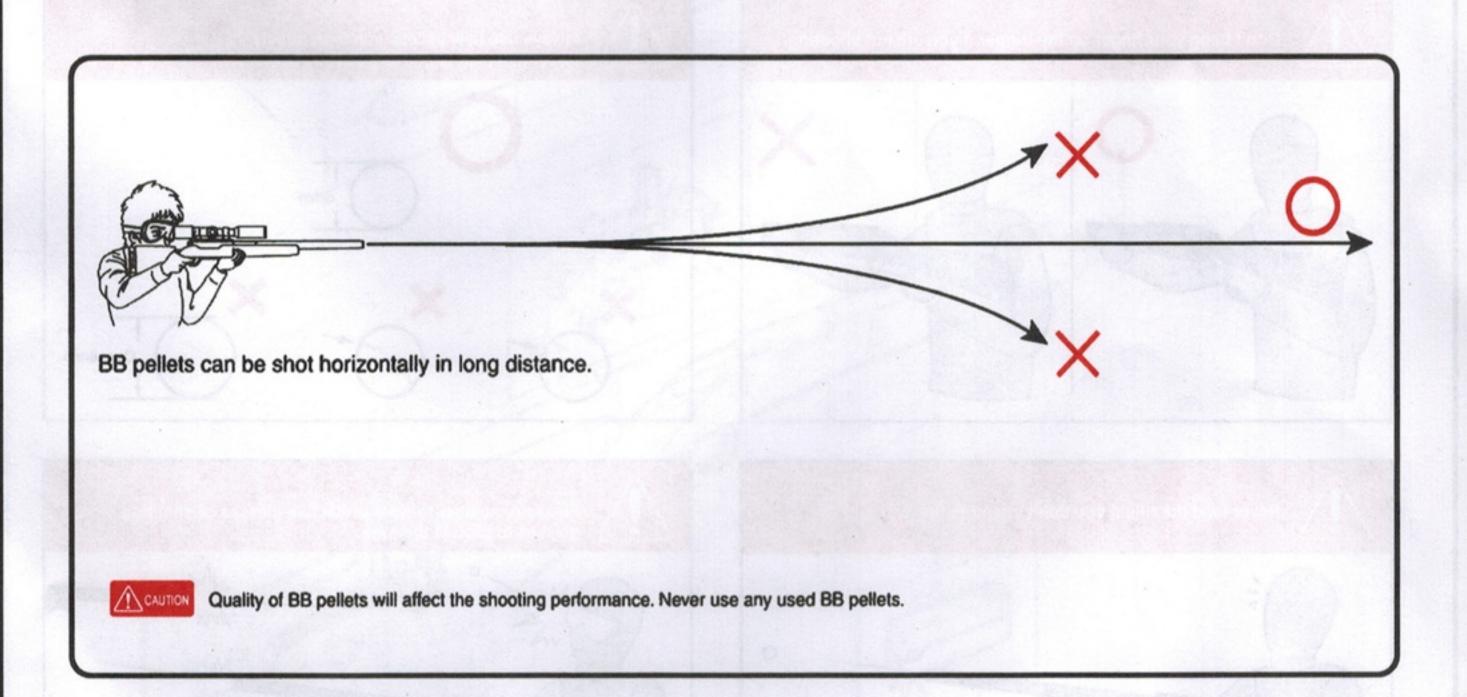


3 NWARNING


Always read this manual before usage.

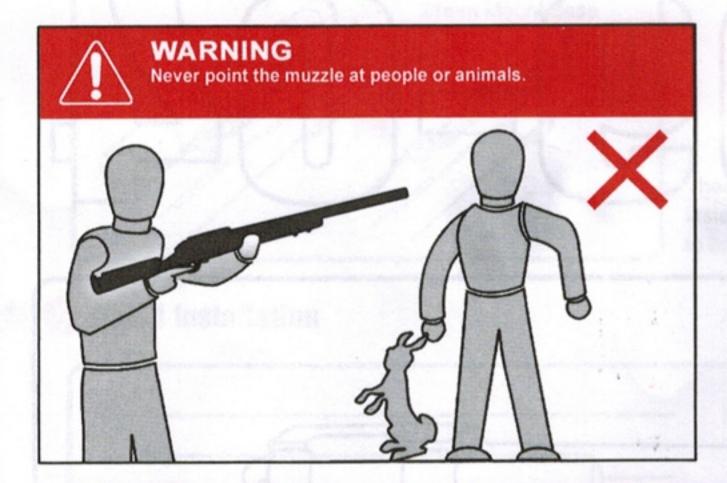








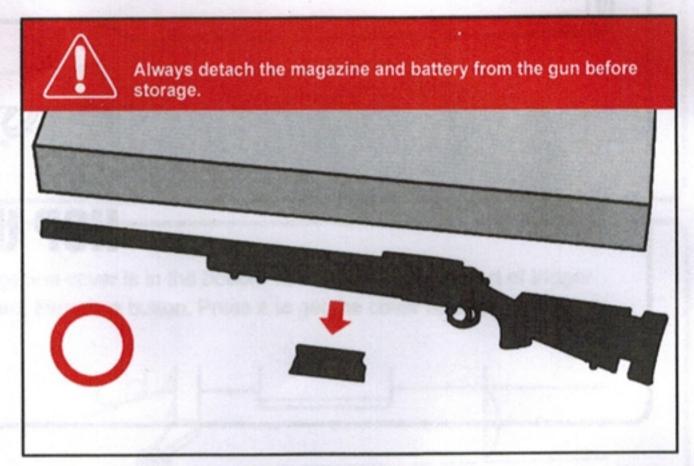

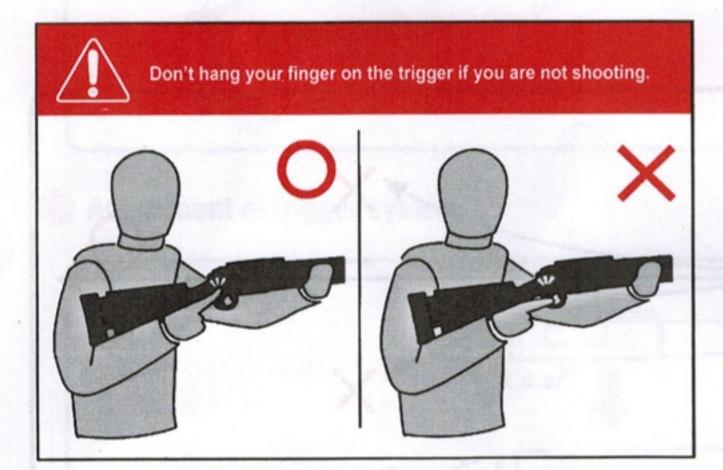

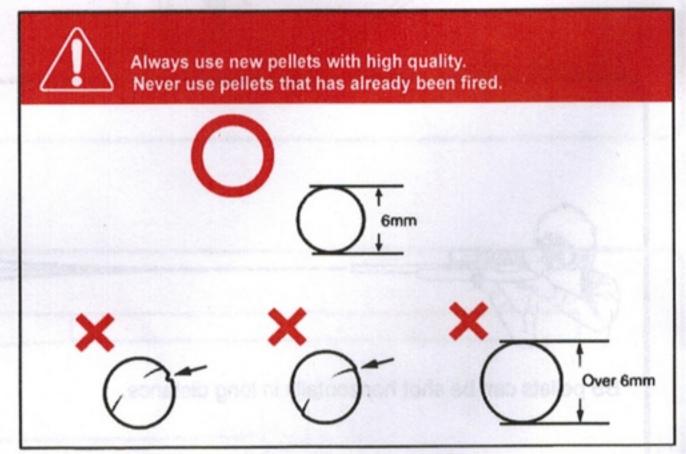

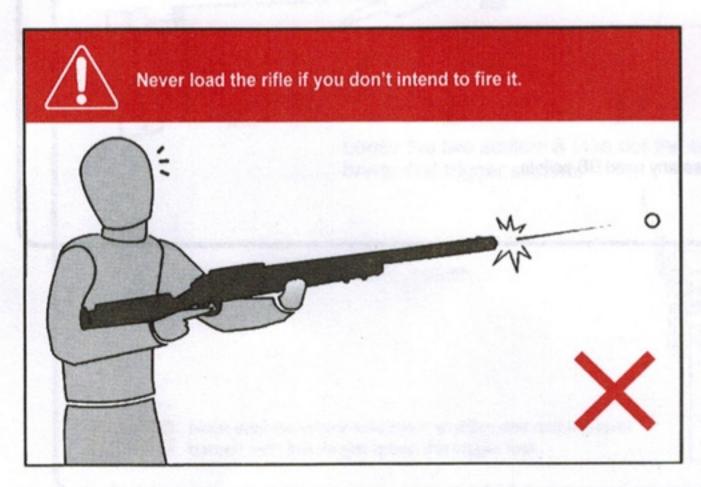

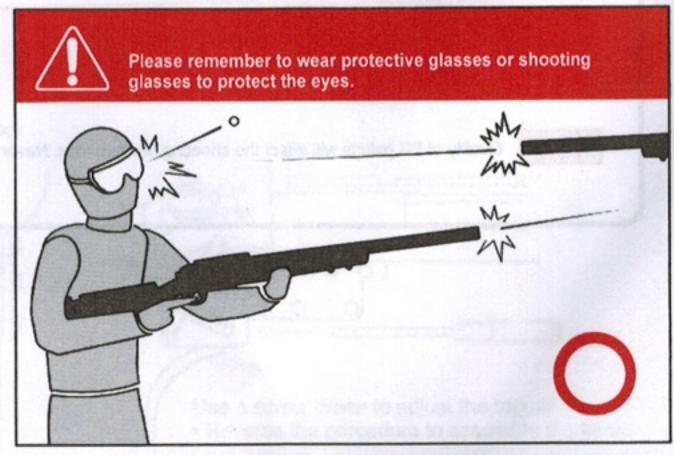

In no event shall Classic Army or any of our partners be liable for any direct or indirect, special,incidental, or consequential damages in connection with the use of our peoducts.

